



Order #XXXXX MOD-1539 Monitor Stand


tem	Qty.	Description
1	1	Base Plate
2	1	34"h Q914 Vertical Extrusion
3	1	34"h Q914 Vertical Extrusion
4	1	8"w Z45 Horizontal Extrusion


Steps:

- 1) Connect verticals [2] & [3] together. See Extrusion Connector detail.
- 2) Attach base plate [1] to assembled verticals.
- 3) Connect Monitor Mount to assembled verticals. See Monitor Mount Attachment detail.
- 4) Connect Shelf [4] to assembled verticals. See Shelf Attachment detail.
- 5) Route cord thru Conduit. See Cord Management detail.

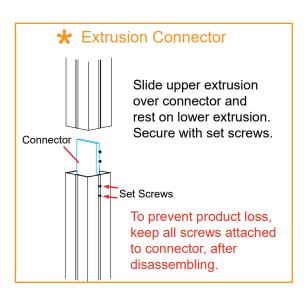


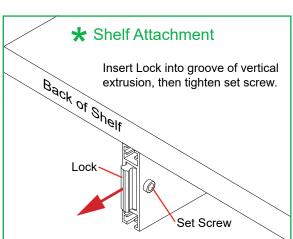

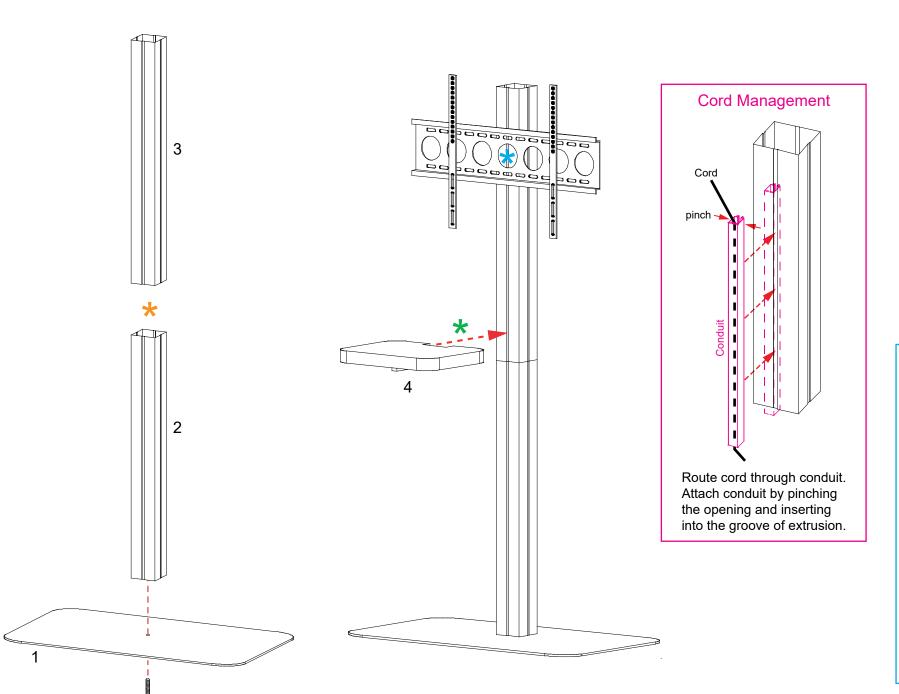

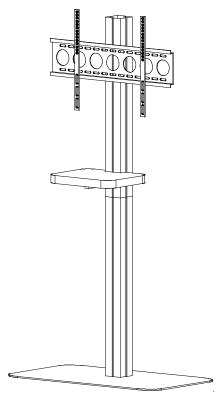

Completed Assembly

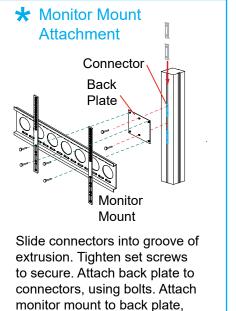

using bolts.

SETUP INSTRUCTIONS



General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a MILD NON-ABRASIVE cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure. Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly

- For loss prevention, tighten all set screws and locks during disassembly.

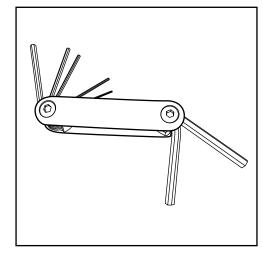

Hex Tool - Essential for Assembly

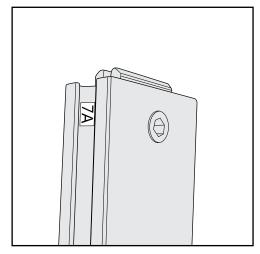


Part Identification - Numbering





DO NOT USE POWER TOOLS

MARNING

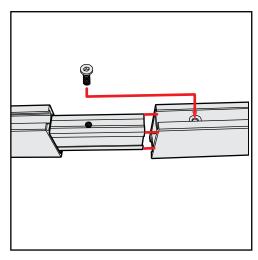


Spline Connection

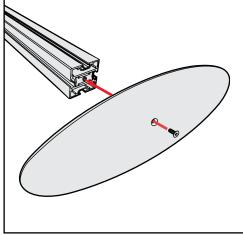

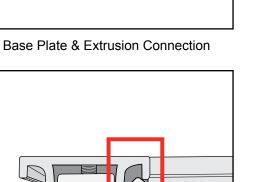

Extrusion & Lock Connection

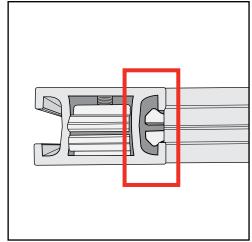

Engaged Lock



LADDERS OR LIFTS MAY BE REQUIRED



ALL CONNECTIONS MUST BE TIGHTLY SECURED





Top View of Each Level

